

# DMX CHART



## COLORado Batten 72X

### 3-Cell DMX Values

#### 3 HSIC (22 Channels)

Channel	Function	Value	Percent/Setting
1	Dimmer 1	000 ⇔ 255	0–100%
2	Hue 1	000 ⇔ 255	0–100%
3	Fine Hue 1	000 ⇔ 255	0–100%
4	Saturation 1	000 ⇔ 255	0–100%
5	Strobe 1	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast
6	Color Macros 1	000 ⇔ 010	No function
		011 ⇔ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇔ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇔ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇔ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇔ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇔ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇔ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
		184 ⇔ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%
210 ⇔ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%		
7	Color Temperatures 1	000 ⇔ 010	No function
		011 ⇔ 028	White 1
		029 ⇔ 046	White 2
		047 ⇔ 064	White 3
		065 ⇔ 082	White 4
		083 ⇔ 100	White 5
		101 ⇔ 118	White 6
		119 ⇔ 136	White 7
		137 ⇔ 154	White 8
		155 ⇔ 172	White 9
		173 ⇔ 190	White 10
		191 ⇔ 208	White 11
		209 ⇔ 226	White 12
		227 ⇔ 244	White 13
245 ⇔ 255	White 14		
8	Dimmer 2	000 ⇔ 255	0–100%
9	Hue 2	000 ⇔ 255	0–100%
10	Fine Hue 2	000 ⇔ 255	0–100%
11	Saturation 2	000 ⇔ 255	0–100%
12	Strobe 2	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast

Channel	Function	Value	Percent/Setting
13	Color Macros 2	000 ⇔ 010	No function
		011 ⇔ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇔ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇔ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇔ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇔ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇔ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇔ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
		184 ⇔ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		210 ⇔ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%
14	Color Temperatures 2	000 ⇔ 010	No function
		011 ⇔ 028	White 1
		029 ⇔ 046	White 2
		047 ⇔ 064	White 3
		065 ⇔ 082	White 4
		083 ⇔ 100	White 5
		101 ⇔ 118	White 6
		119 ⇔ 136	White 7
		137 ⇔ 154	White 8
		155 ⇔ 172	White 9
		173 ⇔ 190	White 10
		191 ⇔ 208	White 11
		209 ⇔ 226	White 12
		227 ⇔ 244	White 13
245 ⇔ 255	White 14		
15	Dimmer 3	000 ⇔ 255	0–100%
16	Hue 3	000 ⇔ 255	0–100%
17	Fine Hue 3	000 ⇔ 255	0–100%
18	Saturation 3	000 ⇔ 255	0–100%
19	Strobe 3	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast
20	Color Macros 3	000 ⇔ 010	No function
		011 ⇔ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇔ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇔ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇔ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇔ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇔ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇔ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
		184 ⇔ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		210 ⇔ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%

# DMX CHART



## COLORado Batten 72X

Channel	Function	Value	Percent/Setting
21	Color Temperatures 3	000 ⇔ 010	No function
		011 ⇔ 028	White 1
		029 ⇔ 046	White 2
		047 ⇔ 064	White 3
		065 ⇔ 082	White 4
		083 ⇔ 100	White 5
		101 ⇔ 118	White 6
		119 ⇔ 136	White 7
		137 ⇔ 154	White 8
		155 ⇔ 172	White 9
		173 ⇔ 190	White 10
		191 ⇔ 208	White 11
		209 ⇔ 226	White 12
		227 ⇔ 244	White 13
245 ⇔ 255	White 14		
22	Dimmer Speed	000 ⇔ 009	Preset dimmer speed from display menu
		010 ⇔ 029	Dimmer speed mode off
		030 ⇔ 069	Dimmer speed mode 1 (fastest)
		070 ⇔ 129	Dimmer speed mode 2
		130 ⇔ 189	Dimmer speed mode 3
		190 ⇔ 255	Dimmer speed mode 4 (slowest)

### 3 RGBAW FUL (43 Channels)

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Fine Dimmer	000 ⇔ 255	0–100%
3	Red 1	000 ⇔ 255	0–100%
4	Fine Red 1	000 ⇔ 255	0–100%
5	Green 1	000 ⇔ 255	0–100%
6	Fine Green 1	000 ⇔ 255	0–100%
7	Blue 1	000 ⇔ 255	0–100%
8	Fine Blue 1	000 ⇔ 255	0–100%
9	Amber 1	000 ⇔ 255	0–100%
10	Fine Amber 1	000 ⇔ 255	0–100%
11	White 1	000 ⇔ 255	0–100%
12	Fine White 1	000 ⇔ 255	0–100%
13	Color Macros 1	000 ⇔ 010	No function
		011 ⇔ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇔ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇔ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇔ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇔ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇔ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇔ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
184 ⇔ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%		
210 ⇔ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%		

Channel	Function	Value	Percent/Setting
14	Color Temperatures 1	000 ⇔ 010	No function
		011 ⇔ 028	White 1
		029 ⇔ 046	White 2
		047 ⇔ 064	White 3
		065 ⇔ 082	White 4
		083 ⇔ 100	White 5
		101 ⇔ 118	White 6
		119 ⇔ 136	White 7
		137 ⇔ 154	White 8
		155 ⇔ 172	White 9
		173 ⇔ 190	White 10
		191 ⇔ 208	White 11
		209 ⇔ 226	White 12
		227 ⇔ 244	White 13
245 ⇔ 255	White 14		
15	Strobe 1	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast
16	Red 2	000 ⇔ 255	0–100%
17	Fine Red 2	000 ⇔ 255	0–100%
18	Green 2	000 ⇔ 255	0–100%
19	Fine Green 2	000 ⇔ 255	0–100%
20	Blue 2	000 ⇔ 255	0–100%
21	Fine Blue 2	000 ⇔ 255	0–100%
22	Amber 2	000 ⇔ 255	0–100%
23	Fine Amber 2	000 ⇔ 255	0–100%
24	White 2	000 ⇔ 255	0–100%
25	Fine White 2	000 ⇔ 255	0–100%
26	Color Macros 2	000 ⇔ 010	No function
		011 ⇔ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇔ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇔ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇔ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇔ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇔ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇔ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
		184 ⇔ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		210 ⇔ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%

# DMX CHART



## COLORado Batten 72X

Channel	Function	Value	Percent/Setting
27	Color Temperatures 2	000 ⇄ 010	No function
		011 ⇄ 028	White 1
		029 ⇄ 046	White 2
		047 ⇄ 064	White 3
		065 ⇄ 082	White 4
		083 ⇄ 100	White 5
		101 ⇄ 118	White 6
		119 ⇄ 136	White 7
		137 ⇄ 154	White 8
		155 ⇄ 172	White 9
		173 ⇄ 190	White 10
		191 ⇄ 208	White 11
		209 ⇄ 226	White 12
		227 ⇄ 244	White 13
245 ⇄ 255	White 14		
28	Strobe 2	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Pulse strobe, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
29	Red 3	000 ⇄ 255	0–100%
30	Fine Red 3	000 ⇄ 255	0–100%
31	Green 3	000 ⇄ 255	0–100%
32	Fine Green 3	000 ⇄ 255	0–100%
33	Blue 3	000 ⇄ 255	0–100%
34	Fine Blue 3	000 ⇄ 255	0–100%
35	Amber 3	000 ⇄ 255	0–100%
36	Fine Amber 3	000 ⇄ 255	0–100%
37	White 3	000 ⇄ 255	0–100%
38	Fine White 3	000 ⇄ 255	0–100%
39	Color Macros 3	000 ⇄ 010	No function
		011 ⇄ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇄ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇄ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇄ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇄ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇄ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇄ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
		184 ⇄ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		210 ⇄ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%

Channel	Function	Value	Percent/Setting
40	Color Temperatures 3	000 ⇔ 010	No function
		011 ⇔ 028	White 1
		029 ⇔ 046	White 2
		047 ⇔ 064	White 3
		065 ⇔ 082	White 4
		083 ⇔ 100	White 5
		101 ⇔ 118	White 6
		119 ⇔ 136	White 7
		137 ⇔ 154	White 8
		155 ⇔ 172	White 9
		173 ⇔ 190	White 10
		191 ⇔ 208	White 11
		209 ⇔ 226	White 12
		227 ⇔ 244	White 13
245 ⇔ 255	White 14		
41	Strobe 3	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast
42	Strobe All	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast
43	Dimmer Speed	000 ⇔ 009	Preset dimmer speed from display menu
		010 ⇔ 029	Dimmer speed mode off
		030 ⇔ 069	Dimmer speed mode 1 (fastest)
		070 ⇔ 129	Dimmer speed mode 2
		130 ⇔ 189	Dimmer speed mode 3
		190 ⇔ 255	Dimmer speed mode 4 (slowest)

**3 RGBAW FIN (30 Channels)**

Channel	Function	Value	Percent/Setting
1	Red 1	000 ⇔ 255	0–100%
2	Fine Red 1	000 ⇔ 255	0–100%
3	Green 1	000 ⇔ 255	0–100%
4	Fine Green 1	000 ⇔ 255	0–100%
5	Blue 1	000 ⇔ 255	0–100%
6	Fine Blue 1	000 ⇔ 255	0–100%
7	Amber 1	000 ⇔ 255	0–100%
8	Fine Amber 1	000 ⇔ 255	0–100%
9	White 1	000 ⇔ 255	0–100%
10	Fine White 1	000 ⇔ 255	0–100%
11	Red 2	000 ⇔ 255	0–100%
12	Fine Red 2	000 ⇔ 255	0–100%
13	Green 2	000 ⇔ 255	0–100%
14	Fine Green 2	000 ⇔ 255	0–100%
15	Blue 2	000 ⇔ 255	0–100%
16	Fine Blue 2	000 ⇔ 255	0–100%
17	Amber 2	000 ⇔ 255	0–100%
18	Fine Amber 2	000 ⇔ 255	0–100%
19	White 2	000 ⇔ 255	0–100%

# DMX CHART



## COLORado Batten 72X

Channel	Function	Value	Percent/Setting
20	Fine White 2	000 ⇄ 255	0–100%
21	Red 3	000 ⇄ 255	0–100%
22	Fine Red 3	000 ⇄ 255	0–100%
23	Green 3	000 ⇄ 255	0–100%
24	Fine Green 3	000 ⇄ 255	0–100%
25	Blue 3	000 ⇄ 255	0–100%
26	Fine Blue 3	000 ⇄ 255	0–100%
27	Amber 3	000 ⇄ 255	0–100%
28	Fine Amber 3	000 ⇄ 255	0–100%
29	White 3	000 ⇄ 255	0–100%
30	Fine White 3	000 ⇄ 255	0–100%

### 3 RGBAW EXT (27 Channels)

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇄ 255	0–100%
2	Fine Dimmer	000 ⇄ 255	0–100%
3	Red 1	000 ⇄ 255	0–100%
4	Green 1	000 ⇄ 255	0–100%
5	Blue 1	000 ⇄ 255	0–100%
6	Amber 1	000 ⇄ 255	0–100%
7	White 1	000 ⇄ 255	0–100%
8	Color Macros 1	000 ⇄ 010	No function
		011 ⇄ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇄ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇄ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇄ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇄ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇄ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇄ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
		184 ⇄ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%
210 ⇄ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%		
9	Color Temperatures 1	000 ⇄ 010	No function
		011 ⇄ 028	White 1
		029 ⇄ 046	White 2
		047 ⇄ 064	White 3
		065 ⇄ 082	White 4
		083 ⇄ 100	White 5
		101 ⇄ 118	White 6
		119 ⇄ 136	White 7
		137 ⇄ 154	White 8
		155 ⇄ 172	White 9
		173 ⇄ 190	White 10
		191 ⇄ 208	White 11
		209 ⇄ 226	White 12
		227 ⇄ 244	White 13
		245 ⇄ 255	White 14
10	Strobe 1	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Pulse strobe, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
11	Red 2	000 ⇄ 255	0–100%
12	Green 2	000 ⇄ 255	0–100%
13	Blue 2	000 ⇄ 255	0–100%

Channel	Function	Value	Percent/Setting
14	Amber 2	000 ⇔ 255	0–100%
15	White 2	000 ⇔ 255	0–100%
16	Color Macros 2	000 ⇔ 010	No function
		011 ⇔ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇔ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇔ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇔ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇔ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇔ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇔ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
		184 ⇔ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%
210 ⇔ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%		
17	Color Temperatures 2	000 ⇔ 010	No function
		011 ⇔ 028	White 1
		029 ⇔ 046	White 2
		047 ⇔ 064	White 3
		065 ⇔ 082	White 4
		083 ⇔ 100	White 5
		101 ⇔ 118	White 6
		119 ⇔ 136	White 7
		137 ⇔ 154	White 8
		155 ⇔ 172	White 9
		173 ⇔ 190	White 10
		191 ⇔ 208	White 11
		209 ⇔ 226	White 12
		227 ⇔ 244	White 13
245 ⇔ 255	White 14		
18	Strobe 2	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast
19	Red 3	000 ⇔ 255	0–100%
20	Green 3	000 ⇔ 255	0–100%
21	Blue 3	000 ⇔ 255	0–100%
22	Amber 3	000 ⇔ 255	0–100%
23	White 3	000 ⇔ 255	0–100%
24	Color Macros 3	000 ⇔ 010	No function
		011 ⇔ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇔ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇔ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇔ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇔ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇔ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇔ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
		184 ⇔ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%
210 ⇔ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%		



# DMX CHART



## COLORado Batten 72X

Channel	Function	Value	Percent/Setting
25	Color Temperatures 3	000 ⇔ 010	No function
		011 ⇔ 028	White 1
		029 ⇔ 046	White 2
		047 ⇔ 064	White 3
		065 ⇔ 082	White 4
		083 ⇔ 100	White 5
		101 ⇔ 118	White 6
		119 ⇔ 136	White 7
		137 ⇔ 154	White 8
		155 ⇔ 172	White 9
		173 ⇔ 190	White 10
		191 ⇔ 208	White 11
		209 ⇔ 226	White 12
		227 ⇔ 244	White 13
245 ⇔ 255	White 14		
26	Strobe 3	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast
27	Strobe All	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast

### 3 RGBAW (15 Channels)

Channel	Function	Value	Percent/Setting
1	Red 1	000 ⇔ 255	0–100%
2	Green 1	000 ⇔ 255	0–100%
3	Blue 1	000 ⇔ 255	0–100%
4	Amber 1	000 ⇔ 255	0–100%
5	White 1	000 ⇔ 255	0–100%
6	Red 2	000 ⇔ 255	0–100%
7	Green 2	000 ⇔ 255	0–100%
8	Blue 2	000 ⇔ 255	0–100%
9	Amber 2	000 ⇔ 255	0–100%
10	White 2	000 ⇔ 255	0–100%
11	Red 3	000 ⇔ 255	0–100%
12	Green 3	000 ⇔ 255	0–100%
13	Blue 3	000 ⇔ 255	0–100%
14	Amber 3	000 ⇔ 255	0–100%
15	White 3	000 ⇔ 255	0–100%

### 3 RGBA EXT (24 Channels)

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Fine Dimmer	000 ⇔ 255	0–100%
3	Red 1	000 ⇔ 255	0–100%
4	Green 1	000 ⇔ 255	0–100%
5	Blue 1	000 ⇔ 255	0–100%
6	Amber 1	000 ⇔ 255	0–100%

Channel	Function	Value	Percent/Setting
7	Color Macros 1	000 ⇔ 010	No function
		011 ⇔ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇔ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇔ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇔ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇔ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇔ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇔ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
		184 ⇔ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		210 ⇔ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%
8	Color Temperatures 1	000 ⇔ 010	No function
		011 ⇔ 028	White 1
		029 ⇔ 046	White 2
		047 ⇔ 064	White 3
		065 ⇔ 082	White 4
		083 ⇔ 100	White 5
		101 ⇔ 118	White 6
		119 ⇔ 136	White 7
		137 ⇔ 154	White 8
		155 ⇔ 172	White 9
		173 ⇔ 190	White 10
		191 ⇔ 208	White 11
		209 ⇔ 226	White 12
		227 ⇔ 244	White 13
245 ⇔ 255	White 14		
9	Strobe 1	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast
10	Red 2	000 ⇔ 255	0–100%
11	Green 2	000 ⇔ 255	0–100%
12	Blue 2	000 ⇔ 255	0–100%
13	Amber 2	000 ⇔ 255	0–100%
14	Color Macros 2	000 ⇔ 010	No function
		011 ⇔ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇔ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇔ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇔ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇔ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇔ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇔ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
		184 ⇔ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		210 ⇔ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%

# DMX CHART



## COLORado Batten 72X

Channel	Function	Value	Percent/Setting
15	Color Temperatures 2	000 ⇄ 010	No function
		011 ⇄ 028	White 1
		029 ⇄ 046	White 2
		047 ⇄ 064	White 3
		065 ⇄ 082	White 4
		083 ⇄ 100	White 5
		101 ⇄ 118	White 6
		119 ⇄ 136	White 7
		137 ⇄ 154	White 8
		155 ⇄ 172	White 9
		173 ⇄ 190	White 10
		191 ⇄ 208	White 11
		209 ⇄ 226	White 12
		227 ⇄ 244	White 13
245 ⇄ 255	White 14		
16	Strobe 2	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Pulse strobe, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
17	Red 3	000 ⇄ 255	0–100%
18	Green 3	000 ⇄ 255	0–100%
19	Blue 3	000 ⇄ 255	0–100%
20	Amber 3	000 ⇄ 255	0–100%
21	Color Macros 3	000 ⇄ 010	No function
		011 ⇄ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇄ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇄ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇄ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇄ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇄ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇄ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
		184 ⇄ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		210 ⇄ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%
22	Color Temperatures 3	000 ⇄ 010	No function
		011 ⇄ 028	White 1
		029 ⇄ 046	White 2
		047 ⇄ 064	White 3
		065 ⇄ 082	White 4
		083 ⇄ 100	White 5
		101 ⇄ 118	White 6
		119 ⇄ 136	White 7
		137 ⇄ 154	White 8
		155 ⇄ 172	White 9
		173 ⇄ 190	White 10
		191 ⇄ 208	White 11
		209 ⇄ 226	White 12
		227 ⇄ 244	White 13
245 ⇄ 255	White 14		

Channel	Function	Value	Percent/Setting
23	Strobe 3	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast
24	Strobe All	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast

3 RGBA (12 Channels)

Channel	Function	Value	Percent/Setting
1	Red 1	000 ⇔ 255	0–100%
2	Green 1	000 ⇔ 255	0–100%
3	Blue 1	000 ⇔ 255	0–100%
4	Amber 1	000 ⇔ 255	0–100%
5	Red 2	000 ⇔ 255	0–100%
6	Green 2	000 ⇔ 255	0–100%
7	Blue 2	000 ⇔ 255	0–100%
8	Amber 2	000 ⇔ 255	0–100%
9	Red 3	000 ⇔ 255	0–100%
10	Green 3	000 ⇔ 255	0–100%
11	Blue 3	000 ⇔ 255	0–100%
12	Amber 3	000 ⇔ 255	0–100%

3 RGB EXT (21 Channels)

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Fine Dimmer	000 ⇔ 255	0–100%
3	Red 1	000 ⇔ 255	0–100%
4	Green 1	000 ⇔ 255	0–100%
5	Blue 1	000 ⇔ 255	0–100%
6	Color Macros 1	000 ⇔ 010	No function
		011 ⇔ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇔ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇔ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇔ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇔ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇔ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇔ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
		184 ⇔ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%
210 ⇔ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%		

# DMX CHART



## COLORado Batten 72X

Channel	Function	Value	Percent/Setting
7	Color Temperatures 1	000 ⇄ 010	No function
		011 ⇄ 028	White 1
		029 ⇄ 046	White 2
		047 ⇄ 064	White 3
		065 ⇄ 082	White 4
		083 ⇄ 100	White 5
		101 ⇄ 118	White 6
		119 ⇄ 136	White 7
		137 ⇄ 154	White 8
		155 ⇄ 172	White 9
		173 ⇄ 190	White 10
		191 ⇄ 208	White 11
		209 ⇄ 226	White 12
		227 ⇄ 244	White 13
245 ⇄ 255	White 14		
8	Strobe 1	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Pulse strobe, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
9	Red 2	000 ⇄ 255	0–100%
10	Green 2	000 ⇄ 255	0–100%
11	Blue 2	000 ⇄ 255	0–100%
12	Color Macros 2	000 ⇄ 010	No function
		011 ⇄ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇄ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇄ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇄ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇄ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇄ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇄ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
		184 ⇄ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		210 ⇄ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%
13	Color Temperatures 2	000 ⇄ 010	No function
		011 ⇄ 028	White 1
		029 ⇄ 046	White 2
		047 ⇄ 064	White 3
		065 ⇄ 082	White 4
		083 ⇄ 100	White 5
		101 ⇄ 118	White 6
		119 ⇄ 136	White 7
		137 ⇄ 154	White 8
		155 ⇄ 172	White 9
		173 ⇄ 190	White 10
		191 ⇄ 208	White 11
		209 ⇄ 226	White 12
		227 ⇄ 244	White 13
245 ⇄ 255	White 14		
14	Strobe 2	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Pulse strobe, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast

Channel	Function	Value	Percent/Setting
15	Red 3	000 ⇔ 255	0–100%
16	Green 3	000 ⇔ 255	0–100%
17	Blue 3	000 ⇔ 255	0–100%
18	Color Macros 3	000 ⇔ 010	No function
		011 ⇔ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇔ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇔ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇔ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇔ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇔ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇔ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
		184 ⇔ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%
210 ⇔ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%		
19	Color Temperatures 3	000 ⇔ 010	No function
		011 ⇔ 028	White 1
		029 ⇔ 046	White 2
		047 ⇔ 064	White 3
		065 ⇔ 082	White 4
		083 ⇔ 100	White 5
		101 ⇔ 118	White 6
		119 ⇔ 136	White 7
		137 ⇔ 154	White 8
		155 ⇔ 172	White 9
		173 ⇔ 190	White 10
		191 ⇔ 208	White 11
		209 ⇔ 226	White 12
		227 ⇔ 244	White 13
245 ⇔ 255	White 14		
20	Strobe 3	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast
21	Strobe All	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast

### 3 RGB (9 Channels)

Channel	Function	Value	Percent/Setting
1	Red 1	000 ⇔ 255	0–100%
2	Green 1	000 ⇔ 255	0–100%
3	Blue 1	000 ⇔ 255	0–100%
4	Red 2	000 ⇔ 255	0–100%
5	Green 2	000 ⇔ 255	0–100%
6	Blue 2	000 ⇔ 255	0–100%
7	Red 3	000 ⇔ 255	0–100%
8	Green 3	000 ⇔ 255	0–100%
9	Blue 3	000 ⇔ 255	0–100%

## DMX CHART



### COLORado Batten 72X

#### 1-Cell DMX Values

##### 1 HSIC (8 Channels)

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Hue	000 ⇔ 255	0–100%
3	Fine Hue	000 ⇔ 255	0–100%
4	Saturation	000 ⇔ 255	0–100%
5	Strobe	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast
6	Color Macros	000 ⇔ 010	No function
		011 ⇔ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇔ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇔ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇔ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇔ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇔ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇔ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
		184 ⇔ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%
210 ⇔ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%		
7	Color Temperatures	000 ⇔ 010	No function
		011 ⇔ 028	White 1
		029 ⇔ 046	White 2
		047 ⇔ 064	White 3
		065 ⇔ 082	White 4
		083 ⇔ 100	White 5
		101 ⇔ 118	White 6
		119 ⇔ 136	White 7
		137 ⇔ 154	White 8
		155 ⇔ 172	White 9
		173 ⇔ 190	White 10
		191 ⇔ 208	White 11
		209 ⇔ 226	White 12
		227 ⇔ 244	White 13
245 ⇔ 255	White 14		
8	Dimmer Speed	000 ⇔ 009	Preset dimmer speed from display menu
		010 ⇔ 029	Dimmer speed mode off
		030 ⇔ 069	Dimmer speed mode 1 (fastest)
		070 ⇔ 129	Dimmer speed mode 2
		130 ⇔ 189	Dimmer speed mode 3
		190 ⇔ 255	Dimmer speed mode 4 (slowest)

##### 1 RGBAW FUL (16 Channels)

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Fine Dimmer	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Fine Red	000 ⇔ 255	0–100%
5	Green	000 ⇔ 255	0–100%
6	Fine Green	000 ⇔ 255	0–100%
7	Blue	000 ⇔ 255	0–100%
8	Fine Blue	000 ⇔ 255	0–100%

Channel	Function	Value	Percent/Setting
9	Amber	000 ⇔ 255	0–100%
10	Fine Amber	000 ⇔ 255	0–100%
11	White	000 ⇔ 255	0–100%
12	Fine White	000 ⇔ 255	0–100%
13	Color Macros	000 ⇔ 010	No function
		011 ⇔ 034	R: 100% G: 0–100% B: 0% A: 0% W: 0%
		035 ⇔ 059	R: 100–0% G: 100% B: 0% A: 0% W: 0%
		060 ⇔ 084	R: 0% G: 100% B: 0–100% A: 0% W: 0%
		084 ⇔ 109	R: 0% G: 100–0% B: 100% A: 0% W: 0%
		110 ⇔ 134	R: 0–100% G: 0% B: 100% A: 0% W: 0%
		134 ⇔ 159	R: 100% G: 0% B: 100–0% A: 0% W: 0%
		160 ⇔ 184	R: 100% G: 0–100% B: 0–100% A: 0% W: 0%
		184 ⇔ 209	R: 100–0% G: 100–0% B: 100% A: 0% W: 0%
210 ⇔ 255	R: 100% G: 100% B: 100% A: 100% W: 100%		
14	Color Temperatures	000 ⇔ 010	No function
		011 ⇔ 028	White 1
		029 ⇔ 046	White 2
		047 ⇔ 064	White 3
		065 ⇔ 082	White 4
		083 ⇔ 100	White 5
		101 ⇔ 118	White 6
		119 ⇔ 136	White 7
		137 ⇔ 154	White 8
		155 ⇔ 172	White 9
		173 ⇔ 190	White 10
		191 ⇔ 208	White 11
		209 ⇔ 226	White 12
		227 ⇔ 244	White 13
245 ⇔ 255	White 14		
15	Strobe	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast
16	Dimmer Speed	000 ⇔ 009	Preset dimmer speed from display menu
		010 ⇔ 029	Dimmer speed mode off
		030 ⇔ 069	Dimmer speed mode 1 (fastest)
		070 ⇔ 129	Dimmer speed mode 2
		130 ⇔ 189	Dimmer speed mode 3
		190 ⇔ 255	Dimmer speed mode 4 (slowest)

### 1 RGBAW FIN (10 Channels)

Channel	Function	Value	Percent/Setting
1	Red	000 ⇔ 255	0–100%
2	Fine Red	000 ⇔ 255	0–100%
3	Green	000 ⇔ 255	0–100%
4	Fine Green	000 ⇔ 255	0–100%
5	Blue	000 ⇔ 255	0–100%
6	Fine Blue	000 ⇔ 255	0–100%
7	Amber	000 ⇔ 255	0–100%
8	Fine Amber	000 ⇔ 255	0–100%
9	White	000 ⇔ 255	0–100%
10	Fine White	000 ⇔ 255	0–100%



# DMX CHART



## COLORado Batten 72X

### 1 RGBAW EXT (10 Channels)

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Fine Dimmer	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Green	000 ⇔ 255	0–100%
5	Blue	000 ⇔ 255	0–100%
6	Amber	000 ⇔ 255	0–100%
7	White	000 ⇔ 255	0–100%
8	Color Macros	000 ⇔ 010	No function
		011 ⇔ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇔ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇔ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇔ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇔ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇔ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇔ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
		184 ⇔ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%
210 ⇔ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%		
9	Color Temperatures	000 ⇔ 010	No function
		011 ⇔ 028	White 1
		029 ⇔ 046	White 2
		047 ⇔ 064	White 3
		065 ⇔ 082	White 4
		083 ⇔ 100	White 5
		101 ⇔ 118	White 6
		119 ⇔ 136	White 7
		137 ⇔ 154	White 8
		155 ⇔ 172	White 9
		173 ⇔ 190	White 10
		191 ⇔ 208	White 11
		209 ⇔ 226	White 12
		227 ⇔ 244	White 13
245 ⇔ 255	White 14		
10	Strobe	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast

### 1 RGBAW (5 Channels)

Channel	Function	Value	Percent/Setting
1	Red	000 ⇔ 255	0–100%
2	Green	000 ⇔ 255	0–100%
3	Blue	000 ⇔ 255	0–100%
4	Amber	000 ⇔ 255	0–100%
5	White	000 ⇔ 255	0–100%

### 1 RGBA EXT (9 Channels)

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Fine Dimmer	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Green	000 ⇔ 255	0–100%

Channel	Function	Value	Percent/Setting
5	Blue	000 ⇔ 255	0–100%
6	Amber	000 ⇔ 255	0–100%
7	Color Macros	000 ⇔ 010	No function
		011 ⇔ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇔ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇔ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇔ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇔ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇔ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇔ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
		184 ⇔ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		210 ⇔ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%
8	Color Temperatures	000 ⇔ 010	No function
		011 ⇔ 028	White 1
		029 ⇔ 046	White 2
		047 ⇔ 064	White 3
		065 ⇔ 082	White 4
		083 ⇔ 100	White 5
		101 ⇔ 118	White 6
		119 ⇔ 136	White 7
		137 ⇔ 154	White 8
		155 ⇔ 172	White 9
		173 ⇔ 190	White 10
		191 ⇔ 208	White 11
		209 ⇔ 226	White 12
		227 ⇔ 244	White 13
		245 ⇔ 255	White 14
9	Strobe	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast

### 1 RGBA (4 Channels)

Channel	Function	Value	Percent/Setting
1	Red	000 ⇔ 255	0–100%
2	Green	000 ⇔ 255	0–100%
3	Blue	000 ⇔ 255	0–100%
4	Amber	000 ⇔ 255	0–100%

### 1 RGB EXT (8 Channels)

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Fine Dimmer	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Green	000 ⇔ 255	0–100%
5	Blue	000 ⇔ 255	0–100%

# DMX CHART



## COLORado Batten 72X

Channel	Function	Value	Percent/Setting
6	Color Macros	000 ⇔ 010	No function
		011 ⇔ 034	R: 100%    G: 0–100%    B: 0%    A: 0%    W: 0%
		035 ⇔ 059	R: 100–0%    G: 100%    B: 0%    A: 0%    W: 0%
		060 ⇔ 084	R: 0%    G: 100%    B: 0–100%    A: 0%    W: 0%
		084 ⇔ 109	R: 0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		110 ⇔ 134	R: 0–100%    G: 0%    B: 100%    A: 0%    W: 0%
		134 ⇔ 159	R: 100%    G: 0%    B: 100–0%    A: 0%    W: 0%
		160 ⇔ 184	R: 100%    G: 0–100%    B: 0–100%    A: 0%    W: 0%
		184 ⇔ 209	R: 100–0%    G: 100–0%    B: 100%    A: 0%    W: 0%
		210 ⇔ 255	R: 100%    G: 100%    B: 100%    A: 100%    W: 100%
7	Color Temperatures	000 ⇔ 010	No function
		011 ⇔ 028	White 1
		029 ⇔ 046	White 2
		047 ⇔ 064	White 3
		065 ⇔ 082	White 4
		083 ⇔ 100	White 5
		101 ⇔ 118	White 6
		119 ⇔ 136	White 7
		137 ⇔ 154	White 8
		155 ⇔ 172	White 9
		173 ⇔ 190	White 10
		191 ⇔ 208	White 11
		209 ⇔ 226	White 12
		227 ⇔ 244	White 13
		245 ⇔ 255	White 14
8	Strobe	000 ⇔ 009	No function
		010 ⇔ 099	Strobe, slow to fast
		100 ⇔ 109	No function
		110 ⇔ 179	Pulse strobe, slow to fast
		180 ⇔ 189	No function
		190 ⇔ 255	Random strobe, slow to fast

### 1 RGB (3 Channels)

Channel	Function	Value	Percent/Setting
1	Red	000 ⇔ 255	0–100%
2	Green	000 ⇔ 255	0–100%
3	Blue	000 ⇔ 255	0–100%