



A186G

Colour Changing Glitter Lamp

Instruction Manual



Thank you for buying this Cheetah Leisure Colour Changing Glitter Lamp. We hope it brings you much enjoyment.

Please carefully read the following instructions and warnings and retain this manual for future reference.

Firstly, carefully inspect the product for signs of damage. If any are detected, please do not use and refer back to your supplier.

CAUTIONS AND WARNINGS

- This item is not a toy. Children must not play with the item.
- Children over 12 may use this product but only with adult supervision.
- Periodically check this product for damage. If any is detected, then stop using the product
- Do not use this product where there are flammable liquids or gasses such as petrol etc.
- For indoor use only.
- Only use this product on a firm, flat, stable surface.
- Do not drink the fluid inside this product

INSTALLATION AND USE

- Carefully insert 3 x AA batteries (not supplied) into the battery compartment at the base of the product.
- Turn the unit on via the switch on the base of the product.

INFORMATION

For optimum effect use the product in a slightly darkened room.

TECHNICAL SPECIFICATION

Battery Operated via 3 x AA batteries (not supplied)

Illuminated via Colour changing LED (not replaceable)

DISPOSAL AND RECYCLING

You must not dispose of this product with domestic household waste.

Most local authorities have specific collection system for electronic items and disposal is free of charge to the end-user.

MAINTENANCE

- Store in a dry clean space when not in use.
- Disconnect from the mains supply in when not in use
- Clean only with a slight damp cloth

Electrovision Ltd., Lancots Lane, Sutton, St. Helens, Merseyside WA9 3EX
website: www.electrovision.co.uk

